



Position	Code	description
01	5325112900	HINGE LEFT
02	6125102600	SPRING
03	6125101900	PIN
04	6125102500	SPRING
05	5325113000	HINGE RIGHT
06	5325113600	GRID
07	5325114100	COVER
08	6025102900	INNER COVER
09	5325143300	GASKET
10	7025105700	BASKET
11	7312570469	TOP COVER ASSY FOR 0125692013
12	7312577499	BASKET AND HANDLE
13	ES000	*NOT AVAILABLE
14	7325118000	PAN
15	512113	MICROSWITCH
16	5225101300	THERMOSTAT
17	5325120200	GEAR
18	5325120100	LEVER
19	9824800015	CLIP CLAMP
20	5512500089	TUBE
21	5325120600	STOPPER
22	536330	BRUSH
23	5325114000	SPACER
24	5325113900	SPACER
25	5325104700	SPACER
26	5325146200	CASING
27	5925117500	CONTROL PANEL
28	6125103400	SPRING
29	5325127300	PUSH BUTTON
30	513080	LAMP
31	5311811071	RED LENS
32	5325120000	SLIDER
33	6125102900	PIN
34	5925112500	DOOR
35	511816	FUSE
36	7312577819	STG BASAMENTO+SUPP CONNETTORE (DLS) F6UX

37	5325148100	RUBBER PAD
38	5325106400	BUSH
39	5225100200	TIMER
40	5325118400	SUPPORT
41	5325118500	PUSH BUTTON
42	5325115200	GLASS
43	5225102100	CONNECTOR
44	6025105200	PLATE
45	5325148000	SUPPORT
46	5525107400	BOTTOM
47	7312577519	CABLE