



HEF46

Key No	Part No	Description
1	144605-125	HOBART-Logo,Gold
2	PACU600419	Control panel
3	PACU600429	Lock rod
4	RTCU60003I	Foot
5	PACU60000I	Bottom
6	PACU600002	Left side Panel
7	PACU600052	Stainless steel back panel
3	GACU600I14	Chimney
9	RTCU6000BI	Hook for tank
10	A660310	Basket
11	RTCU600080	Grate
12	144605-74	Element EF46
13	144605-35	Cover
14	GACu600050	Tank
15	FACU600124	Crossbar
16	RTCU6000I2	Water discharge tap
17	PACU600003	Right side Panel
18	RTCU700318	Descharge pipe
19	RTCU600422	Tap rod
20	144605-92	Safety valve knob
21	144605-41	Limit thermostat
22	PACU600129	Squadra porta termostato???????
23	144605-102	Thermostat
24	RTCU700293	Indicator

**HEF46**

Key No	Part No	Description
25	144605-108	Commutator
26	144605-101	Thermostat knob
27	144605-116	Relay
28	144605-115	Suppressor
29	RTBF900045	Terminal block 6 poles
30	PACU600245	Terminal board bar
31	144605-15	Microswitch
32	144605-110	Green warning lamp
33	144605-107	Yellow warning lamp
34	RTC90042I	Feeding cable
35	RTBF800020	Handle
36	RTMINOO283	Seeger
37	144605-99	O-Ring 159