





## HGF46

Key No	Part No	Description
1	PACU600421	Control panel
2	GACU600012	Tank
3	PACU600040	Rear wall
4	RTCU600081	Hook for tank
5	GACU600008	Chimney
6	PACU600043	Stainless steel back panel
7	PACU600002	Left side
8	PACU600001	Bottom
9	144605-73	Grate
10	A660310	Basket
11	144605-35	Cover
12	PACU600124	Crossbar
13	PACU600056	Flange
14	PACU600429	Lock rod
15	RTCU600031	Foot
16	144605-51	Water discharge tap
17	PACU600003	Right side
18	RTCU700318	Discharge pipe
19	RTCU600422	Tap rod
20	144605-92	Safety valve knob
21	144605-76	Piezo lighting
22	RTCU900010	Spark plug
23	144605-97	3 ways pilot
24	144605-38	Cable for piezo lighting



## HGF46

Key No	Part No	Description
25	RTCU600082	Hook for tank
26	RTCU700I4I	Bicone + fitting
27	????????????	no link
28	PACU600058	Valve unit support
29	144605-103	Thermocouple
30	RTCU7006IO	Elbow T 3/8
31	RTCU700293	Indicator
32	RTCU600077	Tubo al. Bruciatore DX
33	????????????	no link
34	144605-98	Burner
35	144605-109	O-Ring
36	RTCU900220	Pipe coupling valve
37	RTCU900103	Nipples
38	RTCU600026	Collector
39	144605-100	Valve unit
40	RTBF800020	Handle
41	PACU600129	Squadra porta termostato
42	RTCu900222	Valve safety knob
43	RTBF900094	Limit thermostat
44	RTCU600078	Tubo al. Bruciatore SX
45	RTCU9000I3	Nut
46	144605-106	Bicone
47	144605-58	Injector Support
48	RTCU900005	Support Lock Nut
49	144605-125	HOBART - Logo Gold