


HOBART

HGF66



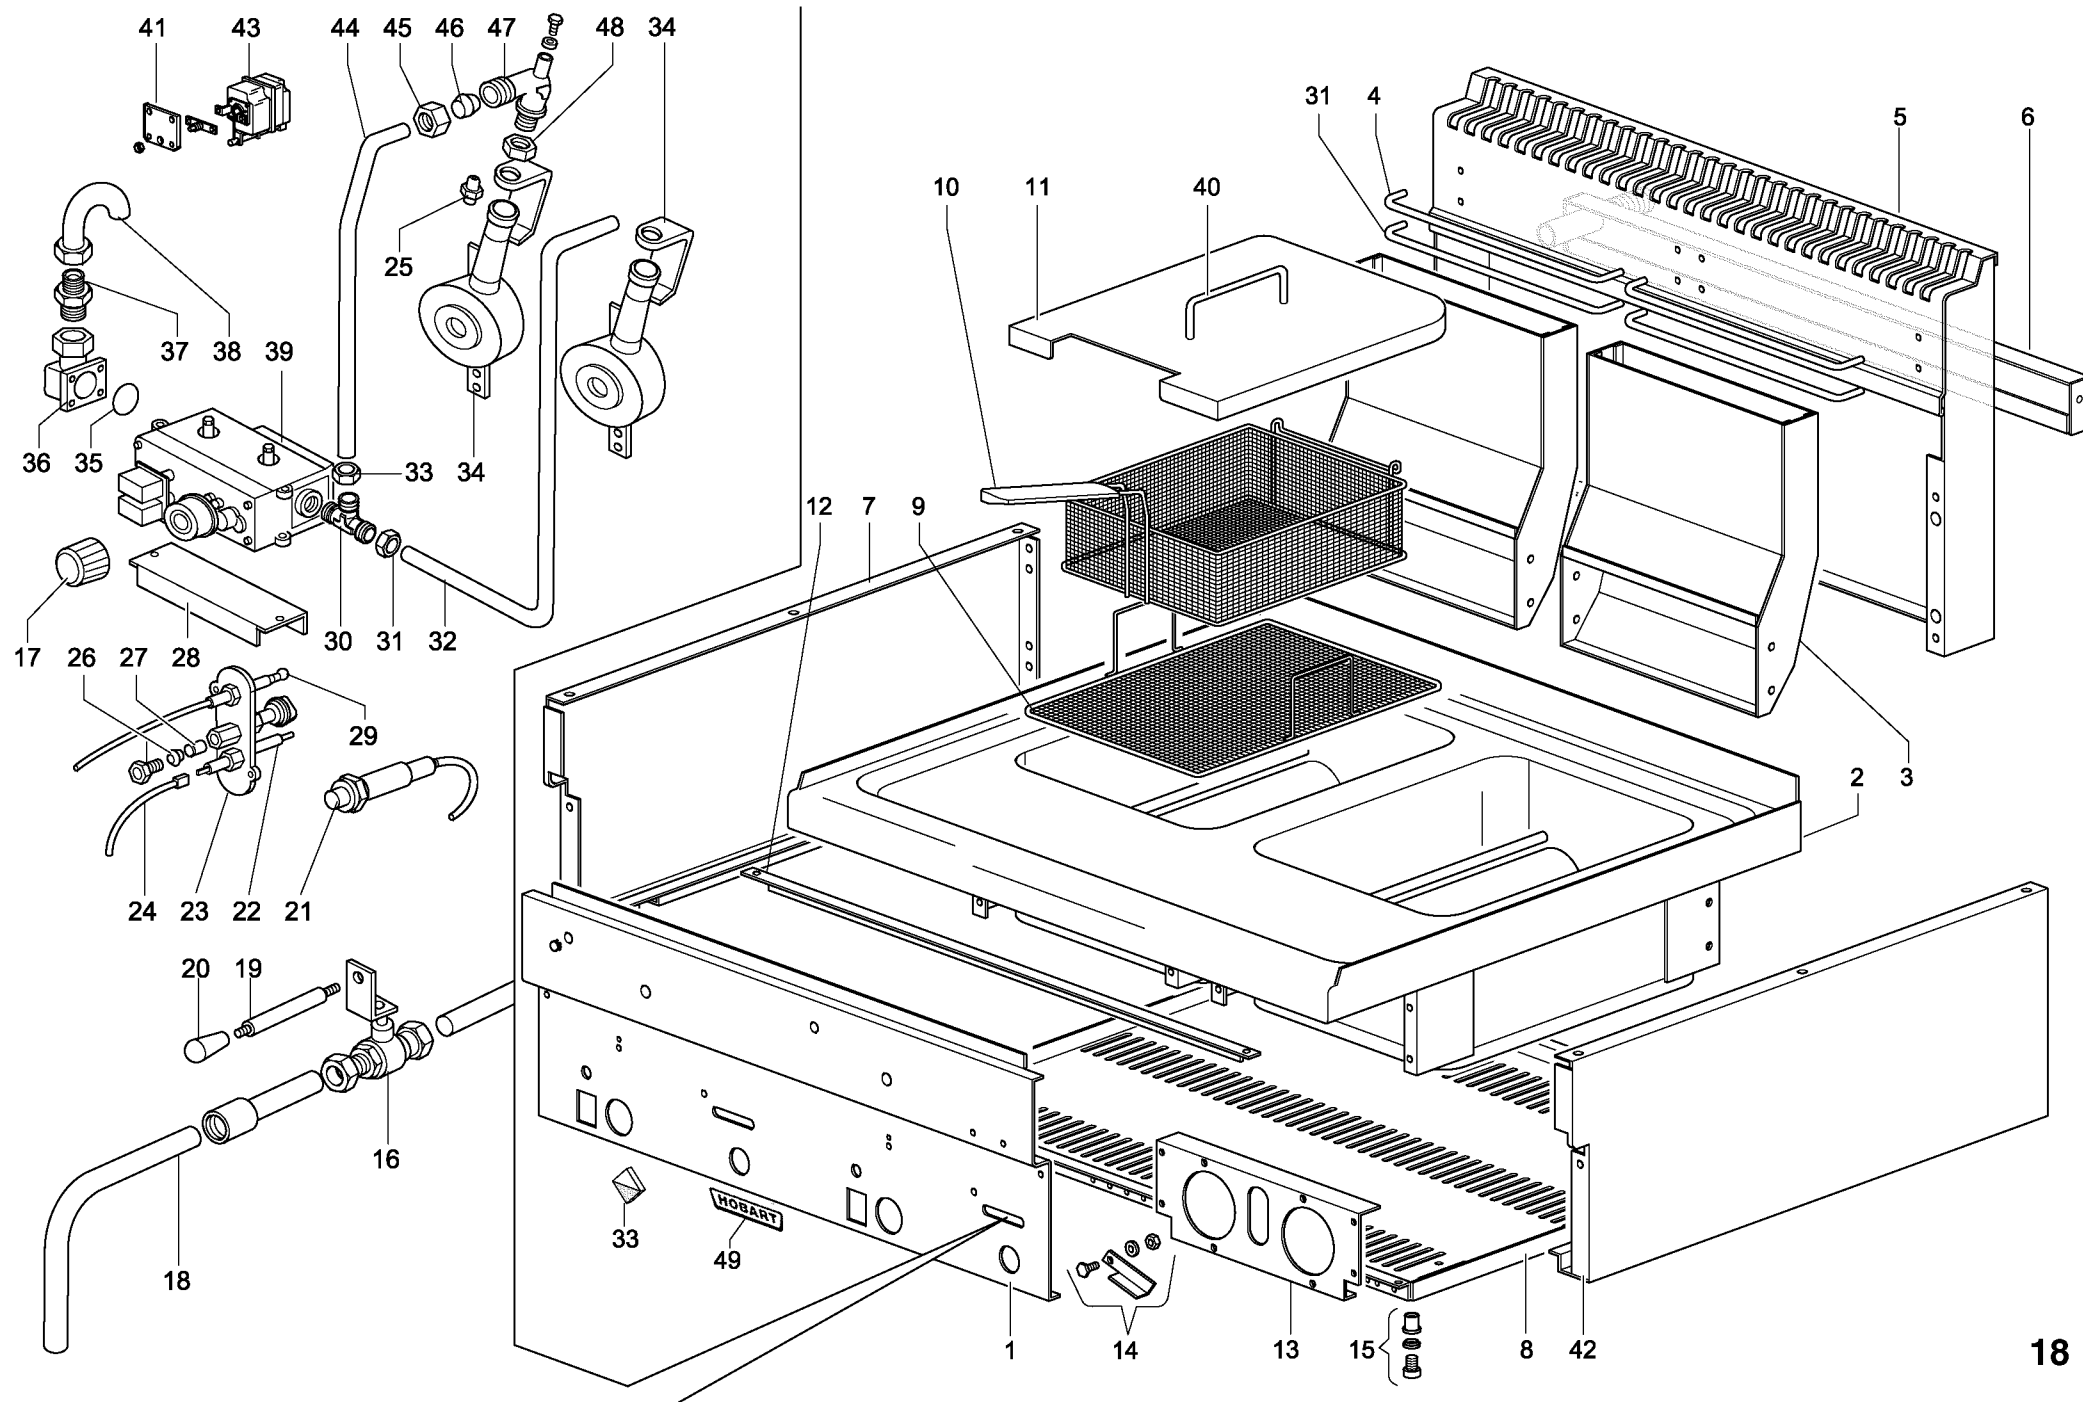

HGF66

Key No	Part No	Description
1	PACU600422	Control panel
2	GACU600011	Tank
3	PACU600040	Rear wall
4	RTCU600081	Hook for tank
5	GACU600009	Chimney
6	PACU600044	Stainless steel back panel
7	PACU600002	Left side Panel
8	PACU600027	Bottom
9	144605-73	Grate
10	A660310	Basket
11	144605-35	Cover
12	PACU600125	Crossbar
13	PACU600056	Flange
14	PACU600429	Lock rod
15	144605-59	Foot
16	144605-51	Water discharge tap
17	RTCU900222	Valve safety knob
18	RTCU700318	Discharge pipe
19	RTCU600422	Tap rod
20	144605-92	Safety valve knob
21	144605-76	Piezo lighting
22	144605-105	Spark plug
23	144605-97	3 ways pilot
24	144605-38	Cable for piezo lighting



HGF66

Key No	Part No	Description
25	????????????	NO LINK
26	RTCU700141	Bicone + fitting
27	????????????	NO LINK
28	PACU600058	Valve unit support
29	144605-103	Thermocouple
30	RTCU700610	Elbow T 3/8
31	RTCU600082	Hook for tank
32	RTCU600077	Tubo al. Bruciatore DX
33	RTCU700293	Indicator
34	144605-98	Burner
35	144605-109	O-Ring
36	RTCU900220	Pipe coupling valve
37	RTCU900103	Nipples
38	RTCU600027	Collector
39	144605-100	Valve unit
40	RTBF800020	Handle
41	PACU600129	Squadra porta termostato
42	PACU600003	Right side Panel
43	144605-44	Limit thermostat
44	RTCU600078	Tube
45	RTCU900013	Nut
46	RTCU900012	Bicone ~10
47	144605-58	Injector Support
48	RTCU900005	Support Lock Nut
49	144605-125	HOBART - Logo Gold